

FLOWMETER MODI FLOW/PRO



Setting of the factor of the flowmeter

Setting of the factor of the flowmeter – factory reset

1. To start the flowmeter in the start position (current and total indication), press the SETUP button once.
2. Then press and hold the SETUP button until the large digits start flashing (approx. 7-10 seconds). When the digits start flashing, stop holding the SETUP button.

BIG DIGITS



Setting of the factor of the flowmeter – factory reset

1. If the factor is other than 2750, a correction must be made.
2. If the factor has a value of, for example, 2720, then the large digits must be flashing again, a single SETUP push activates a specific column/digit of the factor - the digit that we want to change must flashing.

A COLUMN WITH A FLASHING DIGIT



Setting of the factor of the flowmeter – factory reset

1. Single pressing CLEAR increases the value, single pressing TOTAL reduces value.
2. Another pressing of the SETUP causes a moving to the next column/digit.
3. After setting the desired factor, we wait about 10 seconds to save the settings - the display should show the starting position.
4. The flowmeter is ready for use.

